



MAR-FLEX RHINOWELL EGRESS COVER INSTALLATION INSTRUCTIONS

PART# WW-44170




6-Black Snap Washers



6-Square Black Self-Stick



6-3/4" #6 Screws

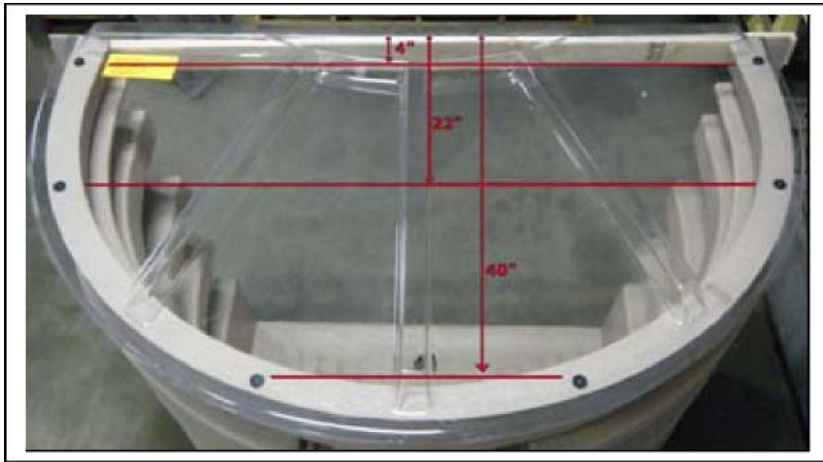

Step 1

You will be installing 6 snap connectors to your well and cover: two 4" from the back wall, two 22" from the back wall, and two 40" from the back wall. (Locations shown on left)



Step 2

Using a 1/16" drill bit, drill one hole in the window well at each of the approximate locations shown above. The holes should be drilled 1" from the outer edge of the window well. (See picture on left)



Step 3

Using a Philips screwdriver, pre thread the screw to start out the hole using the 3/4" #6 screws included in hardware packet and then remove. It is recommended doing this by hand so you avoid stripping the holes. Screw the Black Snap Washers in place.



Step 4

Secure the Black Snap Washers with the 3/4" #6 screws. Be careful not to over tighten!



MAR-FLEX EGRESS COVER INSTALLATION INSTRUCTIONS




Step 5

Lay cover centered on the well from right to left, ensure the back of the cover is flush against the house. Use a marker to place a dot on the cover in the center of each of the six black snap washers. (See picture on left)



Step 6

COVER MUST BE AT ROOM TEMPERATURE (70 degrees F or above), otherwise adhesive will not stick (take indoors if needed). Peel back the self-stick adhesive pad and position the Square Black Self Stick Snaps – centered on each marker dot on the underside of the cover as shown on left. Be sure to push on tightly and rub so the adhesive sticks to the cover properly. Let cover sit for at least one hour before using clips so the adhesive has time to cure.

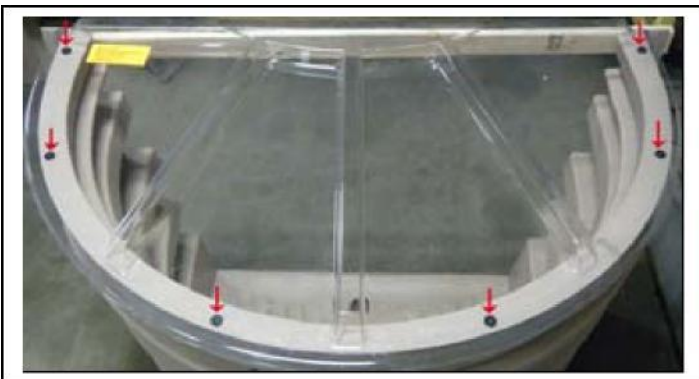

Step 7

Place cover back on window well and push down to attach the Black Snap Washer to the Square Black Snaps.

CLEANING: Window Well Covers may be cleaned with a mild solution of detergent and water. Use of harsh chemicals and scouring powders should be avoided. Not suitable for load bearing weight.

For paint splatters, DO NOT USE PAINT THINNERS OR SOLVENTS! ONLY USE RUBBING ALCOHOL FOR CLEANUP.